 


tzumi



# AquaBoostBoom™




Floating  
Waterproof  
Speaker

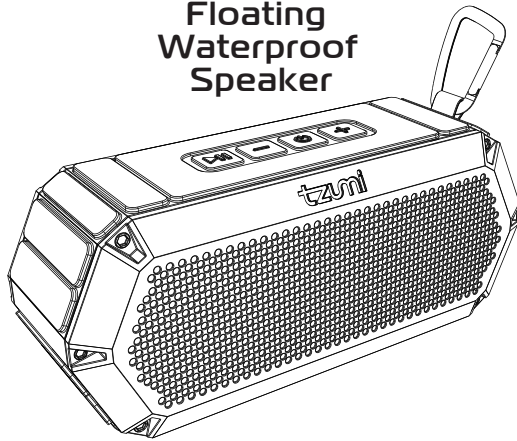

User Guide

## PRODUCT OVERVIEW

1. Volume +/Next
2. Power
3. Volume -/Previous
4. Play/Pause/Answer/Refuse
5. Micro-USB Port
6. Aux
7. LED Indicator
8. Microphone

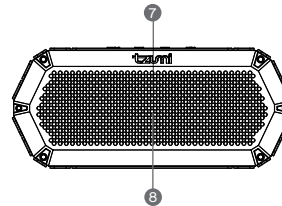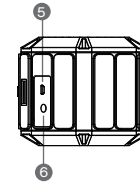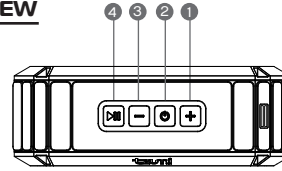

Micro-USB Cable



AUX Cable




## CHARGING YOUR SPEAKER


The battery must be fully charged prior to use. It takes approximately 3 hours to fully charge your Speaker (from depleted unit).

Red light ON - unit charging  
Light OFF - unit fully charged

- A Via AC Adapter/Wall Charger:** Using the provided Micro-USB cable, connect your Speaker (Micro-USB port) to the AC Adapter (USB port).

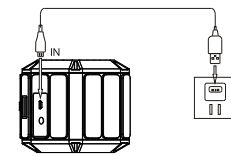

- B Via Computer:** Using the provided Micro-USB cable, connect your Speaker (Micro-USB port) to the computer/laptop (USB port).

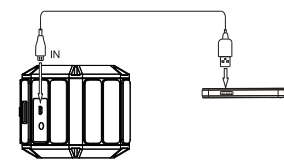

over

## PAIRING THE SPEAKER TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available and enabled on your smartphone. Specific pairing procedures will be different depending on different smartphone models. For detailed information, please refer to your smartphone's User Guide.

- If no device connection is made within 10 minutes of the Speaker being switched on, the Speaker will automatically turn off to save power.
  - After a successful pairing, devices will memorize each other. Therefore, no manual pairing will be needed next time.
1. Keep the distance between the cell phone and the Speaker within 3 feet (for pairing only).
  2. Turn on the Speaker by pressing and holding the Power Button for 3 seconds.
  3. The tone prompt will sound and the LED light will flash blue. The unit will automatically enter into pairing mode.
  4. Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select "Tzumi - AquaBoostBoom" in the device list displayed.
  5. Your AquaBoostBoom Speaker is ready for use.

## SPEAKER CONTROLS

### ON/OFF

Press and hold button for 3 seconds to turn the unit ON.  
Press and hold the button again to turn it OFF.  
The unit will turn itself off if inactive for 10 minutes.

### MUSIC

NOTE: The Music Function Control only works with Bluetooth devices that support the A2DP profile.

#### Go to next song

Press Button.

#### Go to previous song

Press Button.

### PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press button to answer the call.  
Press and hold button for 2 seconds to refuse the call.  
Double press button to call back the last number.  
To hang up the call press again.

### VOLUME


During a call or when listening to music:

**Volume +**  
Press and hold Button.

**Volume -**  
Press and hold Button.

## AUX MODE

Use the 3.5mm audio cable (included) to connect the Speaker to an audio source (MP3/MP4, mobile phone, computer). A tone will sound. The speaker will play the music from the audio source.

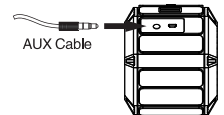

## IMPORTANT SAFEGUARDS

- Keep speaker away from any source of heat.
- Always adjust the speaker volume to a suitable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

## SPECIFICATIONS

**Frequency:** 100Hz ~ 20KHz

**Battery:** 3.7V/2000mAh

**Bluetooth Version:** V4.2

**Distance:** 33 ft (10m)

**Charging Time:** 3 hours

**Playing Time:** 8 hours



tzumi® AquaBoost Boom Waterproof Outdoor Speaker Distributed by tzumi® Inc. NY, NY 10016  
©Copyright 2017 tzumi® All Rights Reserved. Made in China.

©Copyright 2017 Bluetooth SIG, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by tzumi® is under license. Other trademarks and trade names are those of their respective owners. Subject to change without prior notice.